


ACPEEK

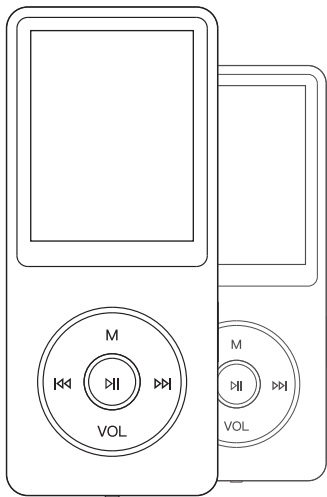

A02(S)T Music Player


CONTENTS

English	-----	01/12
日本語	-----	13/31

Before use

Thank you for purchasing AGPTEK MP3 Player. Please read the manual carefully before using the product. Specifications are subject to change without prior notice.

Buttons&Controls

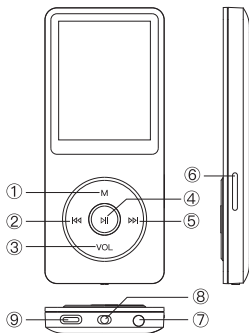

1. Menu button/Scroll up/Volume +
2. Previous/Rewind/Back button
3. Back button/Scroll down/Volume -
4. Play/Pause/Enter/Power on/off
5. Next/Fast forward
6. Card slot
7. Earphone jack
8. Power slider
9. Type-C Port

Quick Guide

Charge the Player

1. By USB cable. The USB cable can both be used for data transfer and charging the player.
2. Use 5V/500mA charger (Charger not included)

Please note: The specifications of the charger must meet the following requirements or any accident or failure happened will be regarded as man-made damage.

Basic Operation

1. Power On/Off. Standby status: hold the play button for 3 seconds to

power on/off.

2. Screen Lock/unlock. Press and hold the button M to lock or unlock the screen.

Home Menu

Each time you press the button / , it will bring you to one of its 9 different functions, including Music, FM radio, Folder, Bluetooth, Record, Setting, Tools, Ebook and Pictures.

Music

Find "Music" on home menu and press the button  to access to its function. A related list will show:

- All songs. All the music files in local folder or card folder.
- Resume (Now playing). Take you back to the song or audio file you are playing last time or playing now.
- Artists/Albums/Genres. View music files sorted by artists/albums/genres.
- Playlist. There are 3 default playlists on the player: Playlist on the go [1]/[2]/[3].
- Update playlists. Update music files.
- Local folder/Card folder. View music file in the local folder or card folder.

Note: These functions are only available when memory card inserted.

Play the music

While it's on music playing interface, hold down the button  to fast forward, press to skip to next track; hold down the button  to fast rewind, press to play the previous track. Press button  to play/pause. Press button  to increase the volume, press button  to lower the volume. Press and hold "VOL" button to wake up volume function.

Sub-menu

When it is on music playing interface, hold down button M to access to the Sub-menu, a related list will show:

1. Home. Press the button  to return the home menu.
2. Play mode.

"Play music from...". Choose to play from all songs/this artist/album/genre.

- 1) Repeat. Press the button, you will see a related list :Repeat Off/repeat 1/repeat all.
- 2) Shuffle. Click the button  to turn on the shuffle mode.
- 3) "Language learning" (only available when the music is playing)
 - Choose the option "Repeat mode" with button  to confirm the starting time A(A is flashing).
 - Then click button  again to set the ending time B(B is flashing). Click button  again and the passage from time A to B will be repeated automatically. The icon for A-B indication will appear on the screen.
 - Click button  again to back to normal playback.
3. Sound settings. Choose to set Equalizer, Speed and Volume limit.
4. Delete. Choose to delete the song that is playing now.
5. Bookmarks. Choose to add bookmark, for the song that is playing now. And you can also choose to go to bookmark or delete bookmark for checking bookmark list or delete the bookmark which you want to delete.
6. Add to playlist.
7. Remove from playlist.

FM Radio

Select "FM Radio" on main menu, click button  to access to its function. A related list will show including "Station list", "Manual tune" , "Auto tune" and "FM recording" . Click button M/VOL to select. Press the button  to go back.

While on radio playing interface, press the button M to go to its Sub-menu.

1. Choose "Start FM radio recording" to save the radio you want to record, find the saved recordings in the "FM recording" .
2. "Tuner Region" . Choose from Common/Japan/European Band.
3. "FM Recording". All saved recordings will be listed here.
4. Radio Background: Choose to open or close
5. Save to Presets
6. Clear Presets
7. Automatic Tuning: Automatically search for radio stations

Note: You can only listen to mono radio station on this player.

Folder

Find "Folder" on Home menu with the button ►|| to access to its function. All of the files in the player will be listed. If the Micro SD card is inserted, you can choose to go to Local folder or Card folder.

Bluetooth

Find "Bluetooth" on Home menu and press the button ►|| to enter, and it will automatically search and display the Bluetooth-enabled devices (Bluetooth headphones/speakers).

You can choose and press button ►|| to connect/cancel the pairing, or press the button to go to the menu list, including:

- Bluetooth on/off. Choose to enable or disable Bluetooth.
- Search for device. When the Bluetooth is enabled, choose "Search Device" to search the nearby Bluetooth devices manually, then all of the detected Bluetooth devices will be listed.
- Device list. Select the device you want to connect/disconnect, and then press button ►|| to confirm. After successfully connected, this player is ready to play music or FM radio by Bluetooth headphones, Bluetooth speaker, etc.

Note:

When listen to radio by Bluetooth, wired headphones are needed as radio antenna.

Record

Select "Record" on Home menu, click button ►|| to access to its function, then a related list will show as "Start Voice Recording" , "Recordings library" , "Storage"(only available with card inserted), "Record format" and "Record bitrate". New features: Recording Source: the recording source can choose microphone and line-in. Note: line-in has 2 functions. Playback Function: when the machine plays, connect MP3 and speakers with LINE IN line to play music.

Recording Function: turn on the recording Line in function, connect two MP3s with LINE IN line or connect other devices with output function (such as mobile phones) with MP3 to record audio files.

Settings

Find "Settings" on Home menu with the button ►|| to access to its function. A related list will show as follow:

- Language: Choose display language.
- Display settings: Set the Brightness, Backlight timer and Screen saver of your player.

Power off: Choose "Shut down Power off " to turn off this function or set the Power off between 1-99(minutes)

Sleep timer: When there is no operation on the device, the device will shut off automatically when reaches the set time.

- Date and time: Click button ►|| to switch. Click button M/VOL to set. Click button ►|| to save your settings.
- Format device/Factory settings: Format the device/SD card or restore the player to factory default settings.

Note: Before formatting the device, please backup the file so as not to lose any files.

- Information: Check player information and disk space about your player.

Tools

Select "Tools" on home menu, click button ►|| to access to its function. A related list will show "Pedometer", "Video" "Calendar""Stopwatch" and "Alarm".

1. Calendar

Press the button ►|| to switch among year|month|day, press the button M/VOL to choose specific year|month|day.

2. Stopwatch

Press the button ►|| to enter. Press again to start the timer, and then press again to stop or hold down button ►|| to resume. Press the

button M/VOL to start a new one. The maximum Stopwatch list is 4.

3. Alarm

4. Video

- Press button ►|| to access to its function. You will need to choose from local folder or card folder if the memory card is inserted.
- Press button ►|| to watch videos, Press the button ◀◀/▶▶ to go to previous/next video or hold the button ◀◀ / ▶▶ to fast backward/forward.
- When it's on video playing interface, hold down the button M to access to its submenu, including: Brightness, Repeat, Delete video, Update card data. Set according to your preference.

5. Pedometer

Press the button ►|| to access to its function. There is a related list will show:

- Start step
 - Choose to start the step, it will display your Elapsed time and Step counts
 - Press the button ►|| to stop and then press the button VOL to save your step.
- Personal info
 - Set your height and weight. you can adjust your height and weight by press the button M/VOL.
 - Set your step length between 1~250cm with the button ►|| to confirm.
- History
 - All your saved step record will be listed here, you can save up to 7 records. If the history record is full, it will cover the previous one.
- Clear history
 - You can choose to clear one of 7 history records you want or clear all history records.

Ebook

Find "Ebook" on Home menu with the button ►|| to access to its function.

- While it's on text playing interface, press button ◀◀ / ▶▶ to turn the

pages. Press the button ►|| to play automatically, press ►|| again to stop.

- Submenu. While it's on text playing interface, hold down button ►|| to enter its submenu and set your preference, including Playsetting Brightness, Page color, Delete ebook, Bookmark select, Delete bookmark, Add bookmark, Select page, Local folder and Card folder (Only available when TF card inserted).

Pictures

Find "Pictures" on the Home menu, click button ►|| to access to its function.

Click ►|| to view pictures, click ◀◀ / ▶▶ to go to previous/next picture. When it's on picture viewing interface, press the button M to access to its submenu, including: Brightness, Backlight timer, Slideshow settings, Delete picture, Update playlist. You can set it according to your preference.

Trouble Shooting

- a. How to re-choose the language?

Find this icon  in the main interface, and click button ►|| to access to its menu, scroll down to the last menu(the menu at the button is "Factory settings" in English). Click button ►|| to enter and choose the first(upper) option which means "Yes". Click button ►|| again to confirm and restore to factory settings. The player will power on automatically and then you can choose language again.

- b. Can't turn on the player; the screen of player goes blank/black; the player is crashed or has a firmware bug.

- 1) Power off the player and try again.
- 2) Slide the power switch to the "Left" side to turn off the player, then hold the play button for 10 seconds to reset the player.
- 3) Update the firmware. Please visit <http://www.agptek.com/support/download.html> or www.agptek.com/blog to download the firmware and update.

- c. Disk error.

If the screen says "Disk error", please format the player. Find it

in“settings”>“Format device”.

d. Songs can't be recognized by the player.

Please check if the song is in a wrong format or has been encrypted, or the song format is not supported by this player. Find the supported audio format below:

MP3:

Bit rate: 8Kbps~320Kbps, Sampling rate:8MHz~48MHz;

WMA:

Bit rate:5Kbps~384Kbps, Sampling rate:8MHz~48MHz;

APE:

Bit rate:800Kbps~1000Kbps(FAST normal compressed), Sampling rate:8MHz~48MHz;

WAV:

Bit rate:32Kbps~384Kbps, Sampling rate:8MHz~48MHz;

FLAC:

Bit rate:1000Kbps~1200Kbps(L0~L8), Sampling rate:8MHz~48MHz.

e: The memory card is not recognized by the music player; can't insert the memory card into the music player.

A1: The music player only supports memory cards in “FAT 32” format. You can check whether the memory card is in “FAT 32” format on the computer.

A2: You can buy genuine Kingston or SanDisk TF cards.

A3: Some music players have deep card slots, and you may use a fingernail or a hard gadget to assist in inserting the memory card.

f: How to play the music of the music player on car audio?

A1: It's recommended to use a 3.5mm audio cable (not included) to transmit audio.

A2: The USB cable that comes with the music player only has the function of charging and transmission, without audio function.

A3: It's not recommended to connect the car audio via Bluetooth, there will be an incompatibility.

g: Song files and audiobook files messed up.

A: When naming, it's recommended to rename songs in numerical or alphabetical order, for example, for 1000 songs, name them “0001+Song Name to 0999+Song Name”.

- h: The music player can not search for Bluetooth devices or can search for Bluetooth devices but keeps showing connection failure.
- A1: It is necessary to check if the Bluetooth function of music player and Bluetooth devices is turned on. If so, please search for pairing.
- A2: Check if the Bluetooth device is in pairing state, if so, please disconnect it first, and then re-search for pairing.
- A3: Check if the music player has been connected to multiple devices before. If so, you can delete them all, and then reconnect.
- A4: Check if the Bluetooth version of the Bluetooth headset or Bluetooth speaker is above 2.1. Sometimes if you can't find it, it may be because of incompatibility.
- i: Frequent disconnection and reconnection after successful Bluetooth connection.
- A1: First of all, please confirm the use environment of the music player. If it is used in close proximity to other 2.4G signal sources or under obstacles, such as indoor wall penetration, signal base stations, routers, high-speed rail, subway, etc., it will be interfered by the signal and thus cause disconnection, and you can try it in an open place.
- A2: If the direct distance between the music player and Bluetooth device exceeds 8-10m, or the distance from the back to the obstacle exceeds 4-5m, the connection will be disconnected. Please use the Bluetooth function within the Bluetooth range of the product.

Specifications

Screen		1.8" TFT screen
Weight		30g
Dimension		39*8*90mm
Flash memory		8G/16G
Format	Audio	MP3/WAV/APE/WMA/FLAC/etc.
	Lyric	LRC
	Video	AMV/AVI(128*160 converted video)
	Recording	MP3/WAV
	EBook	TXT
	Picture	JPG/BMP
Playing time	Music	40H
	Video	9H
	FM radio	14H
	Recording	40H
	Bluetooth	10H
Battery		3.7V/410mAh
Charging time		2 hours
TF card expansion		Up to 128G
Recording distance		3 meters
Bluetooth range		10m in open space

For detailed user manual, please visit:
<http://www.agptek.com/support/download.html>.

Notes On Battery Charging

1. Please use the PC USB port or a 5V/1A power adapter to charge the device.

Note:

A. When using the PC USB port to charge, the current output capability of the USB port of different PCs is different and the charging time will be slightly different. It is recommended that when using the PC USB port to charge, try to power off the device to speed up the charging.

B. The charger and the MP3 player will heat up to a certain extent during charging, which is a normal phenomenon.

2. New battery needs to go through several charging and discharging processes to achieve the best performance.
3. Under normal circumstances, the player can be fully charged in about 3h. It is recommended to pull out from the USB port after charging, and do not connect to the power supply for a long time.
4. The battery of this device is a polymer lithium battery, which can be recharged and used.
5. The polymer lithium battery must be replaced by a professional, and the user must not replace it by himself (Note: If the battery is replaced improperly, there will be a danger of explosion, and it can only be replaced with the same type or equivalent type of battery); in order to protect the environment, please hand over the waste batteries to a professional organization for recycling.
6. The lifespan of the battery may vary with the conditions of use and production time.
7. The battery should not be exposed to sunlight, fire or similar overheating environment.

Tips for Hearing Conservation

1. It is recommended to turn down the volume of the device before using the earphones, and gradually increase until it is suitable when you start to listen.
2. In order to protect hearing, please do not turn up the volume too high (doctors pointed out that listening at high volume for a long time will damage the listener's hearing).
3. When tinnitus occurs, please lower the volume or stop using it.


Caution

1. Before formatting the device, it is recommended to back up the personal data stored in it in time.
2. Ensure that the product is placed safely to avoid accidents and drops caused by children touching.
3. Do not overvoltage, strain the power cord, bend it or be squeezed by heavy objects, so as not to cause overheating or fire.
4. Please keep the product away from the electromagnetic environment; keep away from excessive humidity, smoke and dust and other harsh environments.
5. Do not immerse the device in water; do not use any corrosive or abrasive cleaners to clean it.
6. Do not expose the product to moisture or rain, it may cause the device to malfunction or even be difficult to repair due to the penetration of water and moisture.

ご使用前に

AGPTEK A02 MP3プレーヤーをお買い上げ頂きまして、ありがとうございました。正しく安全にお使いいただくため、ご使用前に必ず取扱説明書をよくお読みください。仕様は予告なしに変更されることがあります。

各部名前

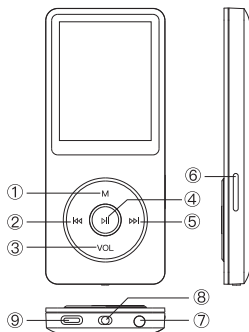

- ①メニューボタン / 上へ移動 / 音量上げ
- ②前 / 巻き戻し / 戻るボタン
- ③戻るボタン / 下へ移動 / 音量下げ
- ④再生 / 一時停止 / 確認 / 電源のオン / オフ
- ⑤次へ / 早送り
- ⑥マイクロSDカード端子
- ⑦イヤホンジャック
- ⑧電源スイッチ
- ⑨Type-Cポート

ご注意

充電について

- プレーヤーと充電器の接続には、同梱のUSBケーブルを使います。パソコンまたは充電器で充電してください（別売）。
- はじめてお使いになる場合や、しばらくお使いにならなかった場合は、なるべく電池残量表示が満タンになるまで充電することをおすすめします。
- 充電完了後は、パソコンまたは充電器からプレーヤーを取り外してください。

● 充電器の仕様は、5V 500mAまたは5V 1000mAの充電器を使用してください。規格外の充電器を誤って利用する場合は、故障になる恐れがあります。無料修理、交換、返品等対応不可です。予めご了承ください。

● 入力： AC110-240V 50 / 60Hz 最大： 100mA
出力： DC5.0-5.5V 500mA-800mA

● 電池の劣化を抑えるために、プレーヤーを長期間使わない場合でも、1ヶ月から3ヶ月ごとに充電するようにしてください。

● 5時間以上充電または置きっ放し充電しない。バッテリーが故障する原因となります。

● 充電端子に水が付着していないことを確認してから充電する。感電・ショート・発火の原因となります。

ヒント： 電池残量が不足しているときにパソコンへ接続すると、画面表示までに約10～30分程度時間がかかる場合があります。

本製品の取り扱いについて

● 落としたり、重いものを乗せたり、強いショックを与えたり、圧力をかけないでください。故障の原因となります。

● 以下のような場所に置かないでください。

－直射日光が当たる場所や暖房器具の近くなど温度が非常に高いところ

変色したり、変形したり、故障したりすることがあります。

－ダッシュボードや、炎天下で窓を閉め切った自動車内（とくに夏季）

－ホコリの多いところ

－風呂場など、湿気の多いところ

－磁石、スピーカーボックス、テレビなど、磁気を帯びたものの近く

● 水がかからないようご注意ください。本製品は防水仕様ではありません。

液晶画面について

● 液晶画面を強く押さないでください。画面にムラが出たり、液晶画面の故障の原因になります。

基本な使いかた

電源を入れる / 切る

電源スイッチを右にスライドして電源を入れる。電源スイッチを左にスライドして電源を切る。


待機状態▶|| ボタンを 3 秒間長押しして電源を入れる / 切る。
ヒント: プレーヤーは、一時停止中に一定時間操作がないと、自動的に待機状態になります。再生ボタンを 3 秒間長押しして電源が起動されます。

ご注意: 待機状態でもわずかに電池を消耗します。

スクリーンロック / ロック解除する

任意画面で、Mボタンを長押しして画面をロック / ロック解除できます。誤ってボタンが押されて動作するのを防ぎます。

メイン画面

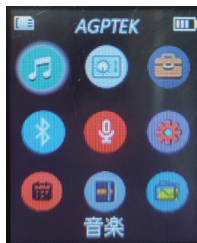

プレーヤーでは、各機能の入り口がメイン画面になります。ここから各機能を選んだり、曲を探したり、設定を変更することができます。

音楽、FM ラジオ、フォルダ、Bluetooth、録音、設定、ツール、電子ブック、画像などの機能を選択できます。

1.M / VOL / ◀◀ / ▶▶ を押して、機能または項目を選ぶ。

2.▶|| ボタンを押して、決定する。

microSDカードを入れる

プレーヤーでは、本体メモリーのほかに、microSDカード（別売）に音楽 / ビデオ / 写真 / 電子ブックなどのコンテンツを保存できます。

1.microSDカードを、microSDカードスロットに、端子面を下向きにしてカチッと音がするまでしっかり差し込む。

2.microSDカードを挿入すると「音楽」でカードフォルダに切り替えることができます。「カードフォルダ」→「プレイリストを更新しますか?」→「はい」を選ぶ。

本体メモリを切り替わる時はローカルフォルダを選択してください。

3.microSDカードを挿入すると[フォルダ] / [画像] / [電子ブック] / [動画] でローカルフォルダとカードフォルダを選択できます。

ご注意:

● microSDカードが認識されない場合は、microSDカードを取り出し、再度入れ直してください。

● 大量のコンテンツを保存したmicroSDカードを入れた場合、プレーヤーのデータベース更新に10分以上かかる場合があります。

microSDカードを取り出す

microSDカードを一度奥に押す。手前に出てきたら、microSDカードスロットから取り出す。

音楽 / ビデオ / 写真などのコンテンツを転送する

● パソコンを使って音楽 / ビデオ / 写真を取り込む

1.インターネット接続したパソコンとプレーヤーを同梱のUSBケーブルで接続する。

2.プレーヤーの充電タイプは[充電&転送]を選ぶ。

3.スタート画面から[デスクトップ]をクリックし、デスクトップ画面から[エクスプローラー]をクリックする。

4.画面の左側で[PC]をクリックする。

5.[AGP-A02]をダブルクリックする。

6.音楽 / ビデオ / 写真などのコンテンツを[AGP-A02]にドラッグ&ドロップする。

7.タスクバーにある△マークをクリックし、ハードウェアの取り外しマークをクリックする。AGP-A02の取り出しを選択してプレーヤーをパソコンから取り外す。

● パソコンを使わずに音楽を取り込む

録音用ケーブル（別売）を使ってプレーヤーとオーディオ機器を接続すると、プレーヤーに直接、曲を録音することができます。

1.録音用ケーブルを接続する。

ヘッドホンをつないだ端子に録音用ケーブルのステレオミニプラグ(3.5mm)を差し込み、もう一方をプレーヤーのイヤホンジャック(3.5mm)につなぎます。

2.[録音] → [録音デバイスを選択] → [ライン入力]を選ぶ。

3.[音声録音を開始]を選択して、[しばらくお待ちください]

の表示が出ます。オーディオ機器の再生ボタンの押して準備する。

4. プレーヤー画面に録音のアイコンと [0: 00: 00] が出ると、オーディオ機器の再生を始める。
5. プレーヤーのボタンを押して録音が止まる。
6. VOLボタンを押して録音ファイルを保存する。
7. 録音した曲はボイスフォルダーに保存されます。

ご注意: 録音した曲の曲名を変更したい場合はパソコンをご利用になるかスマホをお使いください。

OTGアダプター(別売り)を使ってプレーヤーとAndroidスマホを接続すると、プレーヤーに直接、音楽 / ビデオ / 写真を転送することができます。

1. スマホの充電口にOTGアダプターを差し込み、スマホとプレーヤーを同梱のUSBケーブルで接続する。
 2. プレーヤーの充電タイプは [充電 & 転送] を選ぶ。
 3. スマホ通知バーに選択の案内が出て、設定を [転送] に変更する。
 4. スマホのファイル管理アプリを選ぶ。
 5. [ACTIONS製USBドライブ] が表示され、プレーヤー本体内部のメモリとなります。
 6. スマホ内部の音楽 / ビデオ / 写真などのコンテンツを選択して、[ACTIONS製USBドライブ] にコピーする。
- ヒント: USB OTGは、USB機器同士を接続して使うために制定されたUSBインターフェースの規格で、PCを介さずにプレーヤーをスマホと直接つなぎたい、スマホから直接USBメモリにデータを移行したい、というニーズに応えるかたちでUSB2.0に追加された仕様です。

ご注意: OTG規格を利用するには、OTG (USBホスト機能) 対応のスマホであることが条件。iPhoneは対応しません。

音楽

[メイン画面] → [音楽] を選ぶ。

[再生中]: 再生中の曲に戻ります。

[すべての曲]: すべての曲がリストされます。希望の曲を選び再生が始まります。

[リジューム再生]: 再生中の曲、または前回再生していた曲やオーディオファイルに戻ります。

[アーティスト]/[アルバム]/[ジャンル]: アーティスト / アルバム / ジャンルごとに曲を再生することができます。

[プレイリスト]: プレイリスト[1]、プレイリスト[2]、プレイリスト[3]を選択できます。

[プレイリスト更新]: 外部の Micro SD カードまたはプレーヤーの内蔵メモリの曲を更新します。

[ローカルフォルダ]/[カードフォルダ]: 音楽ファイルをローカルフォルダまたはSDカードフォルダに切り替えることができます。

ヒント: ローカルフォルダ / カードフォルダの機能は、microSD カードを挿入した場合にのみ使用できます。

音楽再生画面の操作

音楽再生画面で、**▶▶** ボタンを押して次の曲へ行きます。**▶▶** ボタンを長押しすると早送りをします。**◀◀** ボタンを押して前の曲へ行きます。**◀◀** ボタンを長押しすると巻き戻しをします。**▶||** ボタンを押して再生 / 一時停止します。

音量の調整 (VOLボタン)

VOL ボタンを長押しして、**▶▶** / **◀◀** ボタンを押して音量を調節します。

戻るボタン

音楽再生画面でVOL ボタンを押して音楽リスト画面に戻ります。他の画面で **◀◀** ボタンを押して前の画面に戻ります。**◀◀** ボタンを押し続けてメイン画面に戻ります。

サブメニュー

音楽再生画面でM ボタンを押してサブメニューを表示する。

[メイン画面に戻る]: メイン画面に戻る。

[再生方法]: 希望の設定の種類を選ぶ。選んだ再生方法で曲を再生することができます。

設定の種類	説明
リピート→リピートオフ	再生範囲の曲を順に再生します。
リピート→1 曲リピート	再生中または再生を始めた曲を繰り返し再生します。

リピート→全曲リピート	再生範囲の曲を順に繰り返し再生します。
シャッフル	再生範囲の曲を順不同に再生します。
区間リピート設定 (A-Bリピート再生)	再生中の音声の任意の区間 (A-B区間) を指定して、その区間を繰り返し再生します。
...から音楽を再生する	全曲 / アーティスト / アルバム / ジャンルから再生します。

ヒント:シャッフル設定中の場合は再生方法を他の設定の種類を選択してシャッフルモードがオフになります。

[区間リピート設定]: A-Bリピート再生、再生回数、再生間隔を設定できます。[A-Bリピート再生] は再生中のみ利用できます。

1) **▶||** ボタンで [A-Bリピート] を選択し、開始時刻Aを確定する。Aが点滅する。

2) **▶▶** ボタンをおして終了時刻 Bを確定する。Bが点滅する。

▶▶ ボタン押して時間Aから 時間Bの内容が自動的に再生されます。A-B表示のアイコンが表示されます。

3) **▶||** ボタンを押して通常再生に戻ります。

[サウンド設定]: [イコライザー]、[変速再生]、[音量制限]の設定ができます。

[イコライザー]: オフ / ロック / ファンク / ヒップホップ / ジャズ / クラシック / テクノ / カスタムを設定できます。

カスタムはB、L、M、H、Tを好みの音に設定できます。

[変速再生]: 再生速度を-8レート (最小) から+8レート (最大) に調節できます。

[音量制限]: 耳を刺激するような大きな音を流れないように音量を最大限まで設定できます。**▶▶** / **◀◀** ボタンを押して音量を制限します。**▶||** ボタンを押して決定する。

[プレイリストに追加]: 再生中の曲をプレイリスト[1] / プレイリスト[2] / プレイリスト[3]に追加します。

[プレイリストから削除]: 再生中の曲をプレイリスト[1] / プレイリスト[2] / プレイリスト[3]から削除します。

[この曲削除]: 不要な曲を削除することができます。

ご注意: 一度削除した曲は元に戻せません。削除する前に必要な曲バックアップしてください。

[ブックマーク]: ブックマーク –ブックマークを追加 / ブックマークから再生 / ブックマークを削除することができます。お気に入りの区間だけを再生したり、好きな区間で曲を再生したりするときはブックマークを使います。

FMラジオ

[メイン画面] → [FMラジオ] を選ぶ。

プレーヤーでは、FMラジオ放送を楽しめます。接続した同梱のイヤホンのコードがアンテナとして働きます。コードをできるだけ長く伸ばしてお使いください。

[プリセット]、[手動チューニング]、[自動チューニング]、[FM 録音ファイル] 四つの項目があります。

[手動チューニング]: ►► / ◄◄ ボタンで周波数を選ぶ。

[自動チューニング]: お使いの地域で受信できる放送局を自動的に探してプリセット登録できます（最大30局まで）。

ラジオ再生画面でM ボタンを押してサブメニューに入ります。

[FM 録音開始]: [FM 録音開始] を選択してFM録音を開始します。VOLボタンを押して録音ファイルを保存します。保存した録音は [FM 録音ファイル] にあります。

[バックグラウンド再生]: FMラジオをバックグラウンドで聴く。

[登録済みのプリセット]: 登録済みのプリセットを選んで再生する。

[プリセットをクリア]: すべてのプリセットを削除する。

[周波数帯域]: 共有放送電波 / 日本放送電波 / ヨーロッパ放送電波を選ぶ。

[FM 録音ファイル]: すべての録音ファイルがリストされます。

ご注意: 本製品が使用している周波数は、他の無線機器でも使用していることがあります。万一、本製品と「他の無線局」との間に電波干渉が発生した場合には、速やかに本製品の使用場所を変えるか、または本製品の運用を停止（電波の発射を停止）してください。

フォルダ

[メイン画面] → [フォルダー] → [ローカルフォルダ] または[カードフォルダ] を選択して再生できます。

ヒント: MicroSDカードをセットしていない場合はローカルフォルダの内容のみ確認できます。

Bluetooth

[メイン画面]→[Bluetooth] を選ぶ。

Bluetoothオーディオ機器とプレーヤーを接続し、プレーヤーの音声をワイヤレスで聞くことができます。

1. 初回接続時は、プレーヤーと相手側Bluetoothオーディオ機器をペアリングする。

- 1)相手側のBluetoothオーディオ機器とプレーヤーを隣に置く。
- 2)相手側のBluetoothオーディオ機器をペアリングモードにする。
- 3)[メイン画面]→[Bluetooth]→[Bluetoothオン / オフ]→[Bluetoothオン]を選ぶ。▶▶ ボタンを押して前の画面に戻す。
- 4)[デバイスを検索]→[Bluetoothオーディオ機器名]→ [ペアリング] を選ぶ。

ペアリング可能なBluetoothオーディオ機器の検索が始まり、該当する機器の機種名が表示されます。ペアリングが完了し、自動的にBluetooth接続されていることを確認する。

5)プレーヤーで再生を始めると、相手側のBluetoothオーディオ機器で音声を聞くことができます。

2. Bluetooth接続で音楽を再生する。

ペアリングが済んでいるBluetoothオーディオ機器でも毎回Bluetooth接続が必要です。ペアリング直後はBluetooth接続された状態になります。

1)接続するBluetoothオーディオ機器の電源を入れ、接続待ち状態にする。

詳しくは相手側のBluetoothオーディオ機器の取扱説明書をご覧ください。

2)[メイン画面]→[Bluetooth]→[Bluetoothオン / オフ]→[Bluetoothオン]を選ぶ。

3)[メイン画面]→[Bluetooth]→ [デバイス一覧] を選ぶ。希望のBluetoothオーディオ機器を選ぶ。Bluetooth接続すると、プレーヤー画面は緑色のBluetoothマークが表示されます。

4)プレーヤーで曲を再生する。曲を聞き終わったら、プレーヤーとBluetoothオーディオ機器の両方の電源を切ります。

3. Bluetooth接続を切断する。

[メイン画面]→[デバイス一覧]→[Bluetoothオーディオ機器名]→[ペアリングを切断]を選ぶ。

ヒント: Bluetoothオーディオ機器はワイヤレスイヤホンまたはワイヤレススピーカーなどで音楽再生、FMラジオ再生を聴くことができます。BluetoothモードでFMラジオを聞くとともに、接続した同梱のイヤホンのコードがアンテナとして働きます。

Bluetooth接続の使用上のご注意

- 本製品のBluetoothはカーナビ、スマホやパソコンなどに接続することができません。
- Bluetooth無線技術では約10 mまでの距離で接続できますが、障害物（人体、金属、壁など）や電波状態によって接続有効範囲は変動します。
- 人体は電波の吸収性を有するため、衣類のポケットに入れる等、人体と密着させたり、混雑した電車内での使用時に電波の減衰が生じます。Bluetooth接続に障害を起こす場合があります。このような場合、音が途切れたり接続に失敗することがありますが故障ではありません。使用環境を変えてご使用ください。
- プレーヤーはすべてのBluetoothオーディオ機器とのワイヤレス接続を保証するものではありません。機器の特性や仕様によっては、接続できない、操作方法や表示・動作が異なるなどの現象が発生する場合があります。
- 接続する機器によって、Bluetooth接続ができるようになるまで時間がかかることがあります。
- スマホや他のBluetooth機能のある機器のBluetooth機能をオフすると、干渉を減少し、デバイスの検索はしやすくなります。

録音

[メイン画面]→[録音]を選ぶ。

[音声録音を開始]、[ボイスフォルダー]、[ストレージ]（microSD カードが挿入されている場合のみ）、[録音デバイスを選択]、[録音フォーマット]、[量子化ビット数を選択]という機能があります。

[音声録音を開始]: ▶|| ボタンを押して再生 / 停止する。停止しているときにVOLボタンを押して録音を保存します。

[ボイスフォルダー]: 録音ファイルがリストされます。

[ストレージ]: microSD カードがセットされている場合のみ表示します。録音ファイルを内部メモリまたは外部メモリ(microSD カード)から選ぶ。

[録音デバイスを選択]: 録音デバイスを [マイク] と [ライン入力] 選択できます。

ライン入力は2つの機能があります。

1.再生機能: プレーヤーとスピーカーをオーディオケーブルで接続すると、音声をスピーカーから直接に聴くことができます。

2.録音機能: オーディオケーブルを利用すると、オーディオ機器と接続して音声を録音することができます。

[録音フォーマット]: 録音フォーマットをMP3またはWMVに設定できます。

[量子化ビット数を選択]: 録音ファイルのビットレートを 32kbps / 64kbps / 128kbps / 192kbps に設定できます。量子化ビット数が多いほど、録音の再現性が高い。そのかわりに録音ファイルの容量も増えます。

設定

[メイン画面] → [設定] を選ぶ。

[Language / 言語]: プレーヤーの言語を切り替える。

[表示設定]:

[画面の明るさ]: M / VOL ボタンで明るさを調整します。

[スリープ]: 10秒 / 20秒 / 30秒 / 常にオンに設定できます。操作が一定時間ない場合にプレーヤーを自動的にスリープするようになります。

[待受画面]: なし / 待受画面1 / 待受画面2 / 待受画面3に切り替える。

[スリープタイマー]: 1～99分の時間を設定してタイマーで設定した時間が経過すると自動的に電源を切る。M / VOL ボタンで時間を設定する。

[画面オフタイマー]: 1分 / 2分 / 3分 / 5分 / 10分 / オフに設定できます。操作が一定時間ない場合にプレーヤーを自動的に電源を切る。

[日付と時刻]: ◀▶ ボタンで年、月、日、時、分を選び、M / VOL ボタンで数字を選ぶ。▶▶ ボタンを押して決定する。時刻の表示形式を12時間 / 24時間を設定できます。日付の表示形式

をDD MM YYYY / MM DD YYYY / YYYY MM DDを設定できます。

[端末情報]:プレーヤー情報とストレージを確認する。

[デバイスをフォーマット]:フォーマットすると本体メモリーに記録されたデータはすべて消去されます。フォーマットする前に内容を確認してください。必要に応じてバックアップしてください。

[工場出荷時設定]:すべての設定を出荷時の状態に戻ります。工場出荷時設定完了後、改めて表示言語を設定してください。デフォルトは英語となります。この操作は記録されたデータを削除しません。

ツール

[メイン画面]→ [ツール] を選ぶ。

[歩数計]:

[ウォーキング開始]:経過時間とステップ数を計測する。▶|| ボタンでstart / stopをします。VOLボタンで記録を保存する。

[個人情報]:身長、体重、ステップサイズを設定する。M / VOL ボタンで身長と体重を調整し、▶|| ボタンで決定する。
ステップサイズは20～250cmを調整できます。

[記録]:保存した記録をリストする。最大7つの記録を保存できます。7つ以上の記録を保存する場合は、前の記録をカバーします。

[記録を削除]:不要の記録を削除できます。

[動画]:160 * 128のAMV / AVI動画ファイルをプレーヤーで再生することができます。

▶|| ボタン押して動画を再生します。◀◀/▶▶ ボタンを押して次の動画/前の動画に切り替えます。◀◀/▶▶ ボタンを長押しして早戻し/早送りします。

動画再生画面でMボタンを押してサブメニューに入ります。
ヒント: 動画をプレーヤーに転送する場合は、まずはフォーマット変換ソフトで対応している形式に変換してください。フォーマット変換ソフトはAGPTEK公式サイトにてダウンロードすることができます。

[カレンダー]: カレンダーを確認する。▶▶ ボタンで年、月、日を切り替える。M / VOLボタンで次の年、月、日を切り替える。
ヒント: プレーヤーの日付を変更するには設定にて変更してください。

[ストップウォッチ]: 最大4つの経過時間を計測することができます。

▶|| ボタンを押してタイマーを開始する。もう一度 ▶|| ボタンを押すと停止する。M / VOL ボタンを押して新規を開始します。

[アラーム]:

[アラームオン / オフ]: アラームをオン / オフする。

[時間設定]: ▶▶ ボタンで時、分を選び、M / VOL ボタンで数字を選ぶ。

[繰り返し設定]: 繰り返しなし、毎日、平日（月曜日～金曜日）を設定する。

[サウンド]: 鳴る音楽を設定する。

[アラーム音量]: ◀◀ / ▶▶ ボタンで音量を調節する。▶|| ボタンを押して決定する。

電子ブック

[メイン画面] → [電子ブック] を選ぶ

TXTの電子ブックをプレーヤーで再生することができます。

電子ブック再生画面で、◀◀ / ▶▶ ボタンを押してページを切り替えます。▶|| ボタンを押して自動的に再生されます。もう一度 ▶|| ボタンを押して再生を停止します。

Mボタンを押してサブメニューに入ります。

[画面の明るさ]、[連続スクロール]（自動再生間隔を設定する）、[電子ブックを削除]、[ブックマークを選択]、[ブックマークを削除]、[ブックマークを追加]、[ページ選択]、[背景色]を設定することができます。

トラブルシューティング

言語を再選択する方法。

[設定] (歯車マーク)を選択し、最初の行 [Language / 言語] を ▶|| ボタンで選択します。M / VOL ボタンを押すと言語を選択できます。もう一回 ▶|| ボタンを押すと、設定完了になります。

プレーヤーは電源が入らない。

長期間使用していないなどバッテリーが空の可能性あります。満充電になるまで充電をしてください。充電が始まるまで30分ほ

どかかる場合もありますので、しばらく待ってください。

パソコンに認識されない。

- 接触不良の可能性があります。USBケーブルを抜き差ししてください。
- 充電できる場合は、充電専用ケーブルではないことを確認します。USBケーブルにはデータ転送ができない充電専用のタイプもあります。充電・転送(通信)ケーブルと取り替えてください。
- プレーヤーの充電ポートに目立った異常（キズや外的な損傷）がないか確認します。
- パソコンに接続している他の周辺機器の影響やリソースが不足していないか確認する。パソコンから他の周辺機器を取り外してプレーヤーを接続して認識しないか確認します。
- パソコン本体に問題がないか確認する。複数パソコンがありましたら他のパソコンでもUSBメモリが認識しないか確認します。

画面が表示されているが動作しない。

- パソコンから一度に多量の音楽などのコンテンツを転送した場合は、データベースの更新に時間がかかります。数十分程度時間がかかる場合があります。
- 操作しても反応しない場合は、電源スイッチを左にスライドして電源を切る。電源スイッチを右にスライドしてプレーヤーを再起動してください。
- ファームウェアを更新してください。

電池がすぐになくなる。

- 充電が不十分の可能性があります。パソコンがスタンバイ（スリープ）、休止状態の場合は充電できません。起動した状態を維持して充電してください。
- 充電器の規格は5V500mAまたは5V1000mAのものか確認してください。
- 充電ケーブルまたは充電器を取り替えてください。
- 充電を繰り返すと電池の特性上劣化が発生します。使える時間がお買い上げ時の半分くらいになる充電可能な回数の目安は、約500回です。毎日充電する使い方なら、約1年半から2年くらい経過すると、バッテリーの交換を検討する時期となります。

曲が転送順に表示されない。

● [音楽] 再生では、曲の数字順に並べます。曲名の前に001、002、003、004、.....010、011を付けて順番的に並ぶことができます。

● [フォルダ] 再生では、取り込む時間順に並べます。例えば 15: 51、15: 52、15: 53の順番に並べます。ソフトを利用して簡単に曲順を変更できます。ご購入先までお問い合わせください。

ファイルを取り込んだが表示されない。

プレーヤーで認識できない形式という可能性があります。予めファイル拡張子を確認してください。変換ソフトを利用して対応している形式に変換して取り込んでください。

ファームウェアのアップデート。

<http://www.agptek.com/support/download.html/> または www.agptek.com/blog にアクセスし、ファームウェアをダウンロードしてアップデートしてください。

アップデートについてご不明な点がございましたら購入先までお問い合わせしてください。

ディスクエラー。

[ディスクエラー] と表示される場合は、[設定]にて[デバイスをフォーマット]を選択してプレーヤーをフォーマットしてください。

プレーヤー本体に挿入したmicroSDカードが認識されない。microSDカードを差し込めない。

● 本機はmicroSD カードのファイルシステムが FAT32 しか対応していない。

microSD カードを購入すると工場出荷時のフォーマットが NTFS や exFAT になっていることがあり、そのまま本機に挿すと microSD カードを認識しない、またはエラーを発生させるため、FAT32 にフォーマットする必要がある。

パソコンでmicroSD カードのファイルシステムを確認してください。

● 正規品キングストン(Kingston)またはサンディスク(SanDisk)のmicroSD カードがおすすめ。

● 一部機器のカードスロットが深く、爪や細い突起物で、しっかりと奥まで挿し込んでみてください。

車内でプレーヤーの音楽を聴く方法

● 音楽プレーヤーを3.5mmのAUXケーブル(別売り)で接続して音楽を聴く。

● USBケーブルは充電とデータ転送しか対応していない。USB接続はオーディオ非対応である。

● Bluetooth接続して音楽を聴くことができますが、車種やナビの互換性により接続できない場合がある。

曲順がバラバラになってしまう

● 音楽機能では数字やABC順に表示されます。1000曲を取り込む場合は、先頭に0001～0999という番号をふることがおすすめ。

● フォルダ機能では取り込んだ順に表示されます。UMSSortという無料ソフトを使って解決できる。

Bluetooth機器が接続できない・検出されない。

● プレーヤーとBluetooth機器のBluetoothが有効になっているかチェックする。有効した上で、もう一度Bluetooth機器がプレーヤーに認識できるかを確認する。

● Bluetooth機器がペアリング済み状態になっているかチェックする。接続済みのBluetooth機器を一度接続解除した上で、再度接続し直してみてください。

● プレーヤーが他のBluetooth機器に接続されているかチェックする。一度すべてのBluetooth機器を削除した上で、クリーンな状態で再度接続し直してみてください。

● ワイヤレスイヤホンやワイヤレススピーカーのBluetoothのバージョンは2.1以降かチェックする。それでも接続できない場合は、互換性がない可能性がある。

Bluetooth接続完了したが途切れる。

● 接続するBluetooth機器が有効接続範囲にあるか確認する。

Bluetooth機器とプレーヤーの直線距離は約8～10mが最大通信可能距離となっている。5m以内でも障害物があると音が途切れてしまったりしてしまう場合もある。その距離を超えると接続ができなくなってしまう。

●有効接続範囲内にあっても、Bluetooth機器とプレーヤーの間に電波を遮るような物がある場合、通信距離が短くなってしまう。壁、特にコンクリートや金属板などが機器を遮っていないか確認しましょう。

2.4GHz帯のWi-Fiや電子レンジが発する電磁波もBluetoothの接続は影響を受けてしまうため、できる限りプレーヤーの近くに接続するBluetooth機器を置きましょう。

曲がプレーヤーに認識されません。

曲のフォーマットが間違っているか、暗号化されているか、この曲がサポートされていないかどうかを確認してください。下記はサポートされているオーディオフォーマットです。

再生できるファイルの種類

MP3:

ビットレート: 8Kbps~320Kbps,
サンプリングレート: 8MHz~48MHz;

WMA:

ビットレート: 5Kbps~384Kbps,
サンプリングレート: 8MHz~48MHz;

APE:

ビットレート: 800Kbps~1000Kbps(FASTnormalcompressed),
サンプリングレート: 8MHz~48MHz;

WAV:

ビットレート: 32Kbps~384Kbps,
サンプリングレート: 8MHz~48MHz;

FLAC:

ビットレート: 1000Kbps~1200Kbps(L0~L8),
サンプリングレート: 8MHz~48MHz.

仕様

スクリーン		1.8" TFTスクリーン
重量		30g
寸法		3.9*0.8*9cm
内蔵容量		8G / 16G
フォーマット	オーディオ	MP3 / WAV / APE / WMA / FLACなど
	歌詞	LRC
	動画	128*160 AVI/AMV(変換されたビデオ)
	録音	MP3 / WAV
	電子ブック	TXT
	画像	JPG / BMP
再生時間	音楽	40時間
	動画	9時間
	FMラジオ	14時間
	録音	40時間
	Bluetooth	10時間
バッテリー		3.7V / 410mAh
充電時間		約2時間
TFカード拡張		最大128G
録音距離		3メートル
Bluetooth範囲		10メートル (障害のない広い場所)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



FCC ID: 2AQWYA19X

Manufacturer:

Shenzhen RuiZu Digital Technology Co., Ltd.

Address:

6/F, Building D, KeShangMei Park, Chongqing Road, Fuyong, Bao' an District, Shenzhen, China

Made In China



® 215-JCD103



