

AGPTEK

CABLE

MANAGEMENT SLEEVE

WWW.AGPTEK.COM
support@agptek.com

UK | AR | CET PRODUCT SERVICE LTD.

 Chase Business Centre, 39-41 Chase Side London N14 5BP UK
 info.cetservice@gmail.com

EC REP | UE Fast Refund GmbH

 ue-de@foxmail.com  49(0)211-97538868
 Friedrich-Alfred-Straße 184 Duisburg 47226 Deutschland




Made in China


How to Use:




1. Dry the surface with a clean cloth.

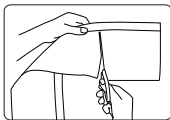


2. Cut out the appropriate length as needed.

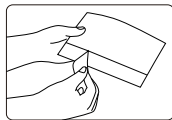

3. Tear off the protective film.



4. Paste and hold for 20~30s.



5. Fix the cable.

How to Remove:

Spraying by disinfectant, the adhesive can be easily removed without damaging the surface.

Warm Tips:

This product is suitable for all kinds of smooth walls (tile, stainless steel, wood grain, glass, plastic, etc.), unsuitable for paper walls, walls that are easy to peel, damp rooms, and rough or porous surfaces.


Pay Attention:

1. Please do not use on wet, dirty, oily or waxy surfaces.
2. When the temperature drops to 10 degrees Celsius or below, please use a hair dryer to slightly heat the adhesive side.
3. After pasting, please wait 24 hours before using, otherwise the viscosity and stability will be reduced.


Wie benutzt es:




1. Reinigen die Oberfläche mit einem sauberen Tuch.

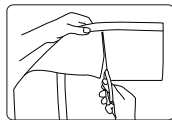


2. Schneiden die entsprechende Länge nach Bedarf.

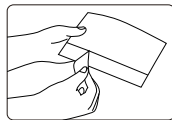

3. Bitte den Schutzfolie abreißen.



4. Kleben und halten für 20 ~ 30s.



5. Kabel befestigen.

Wie zu entfernen:

Durch Sprühen von Desinfektionsmittel kann der Klebstoff leicht entfernt werden, ohne die Oberfläche zu beschädigen.

Hinweise:

Dieses Produkt eignet sich für alle Arten von glatten Wänden (Fliesen, Edelstahl, Holz, Glas, Kunststoff usw.), ungeeignet für Tapete, die leicht abfallende Wände, feuchtes Zimmer und raue oder poröse Oberflächen.

Achtung:

1. Bitte verwenden es nicht auf nassen, schmutzigen, öligen oder wachsartigen Oberflächen.
2. Wenn die Temperatur auf 10 Grad Celsius oder darunter sinkt, verwenden bitte Haartrockner, um die Klebefläche zu erwärmen.
3. Nach dem Kleben warten bitte 24 Stunden, andernfalls werden die Klebkraft und Stabilität reduziert.